


# REV-2 PUMP PACK INSTALLATION INSTRUCTION


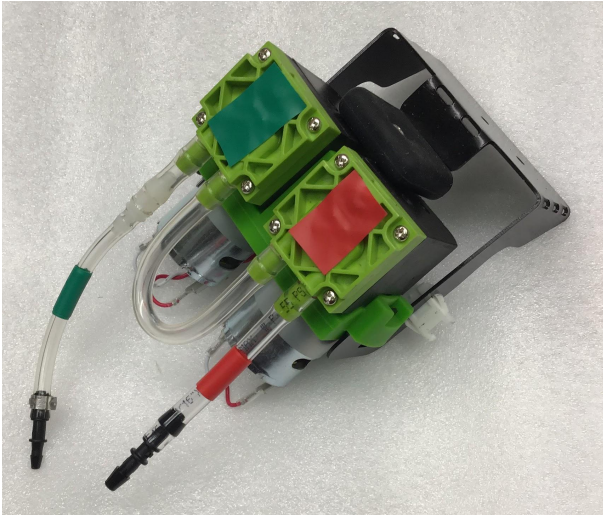


TOOLS REQUIRED  
#2 PHILLIPS SCREWDRIVER  
SCISSORS OR SHARP KNIFE

1

## STEP #1


REMOVE 9 SCREWS

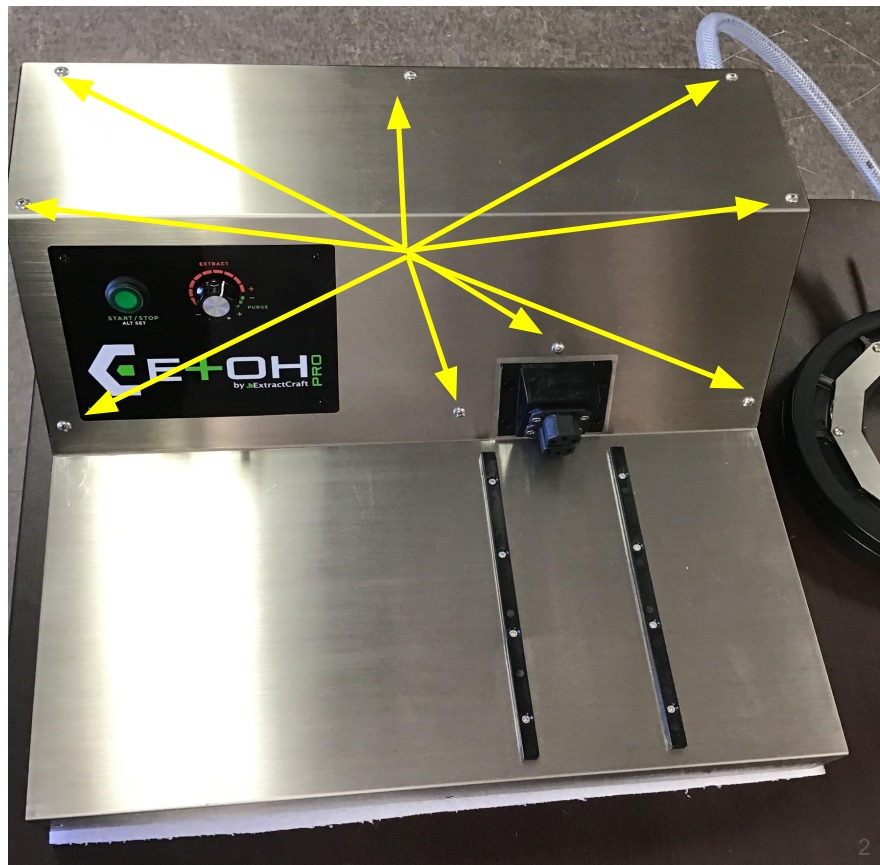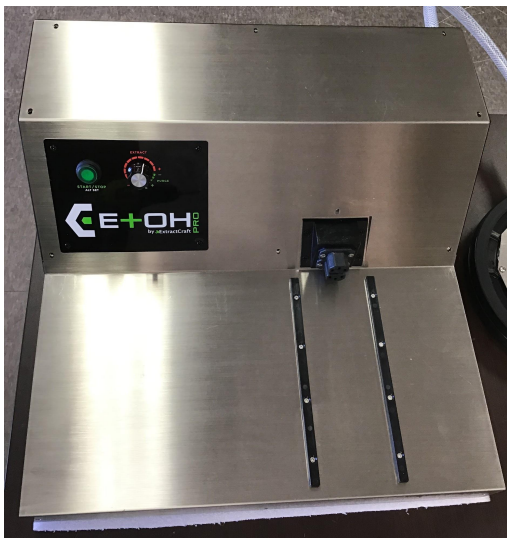

2

## STEP #2



FOLD LID BACK AS SHOWN

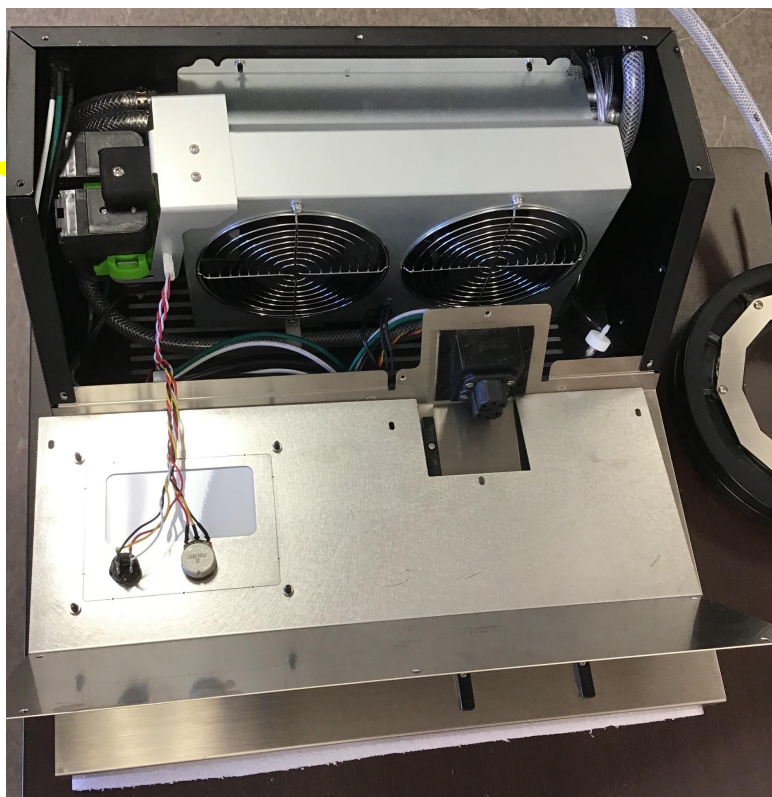

3

## STEP #3


REMOVE PUMP PACK CONNECTOR  
PUSH TAB ON CONNECTOR IN  
DIRECTION OF GREEN ARROW

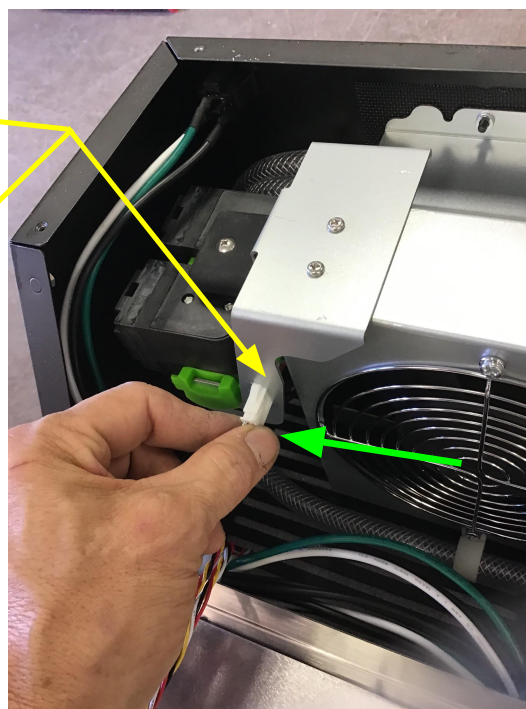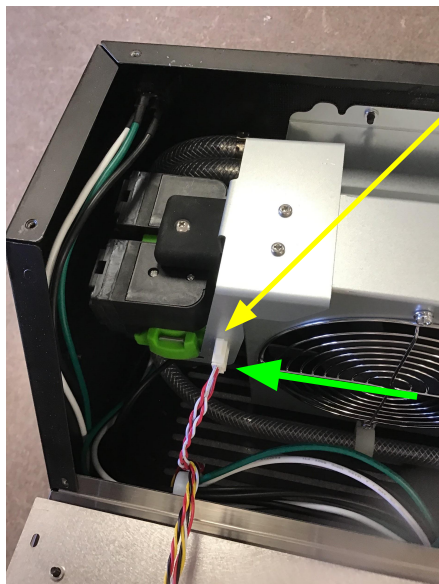

4

## STEP #4



REMOVE THE 2X PUMP PACK SCREWS  
SET ASIDE THEY'LL BE REUSED

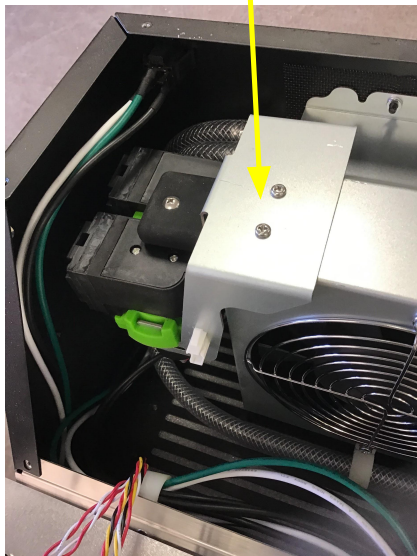

5

## STEP #5


PUSH TUBE #1 & #2 STRAIGHT IN ABOUT 8"

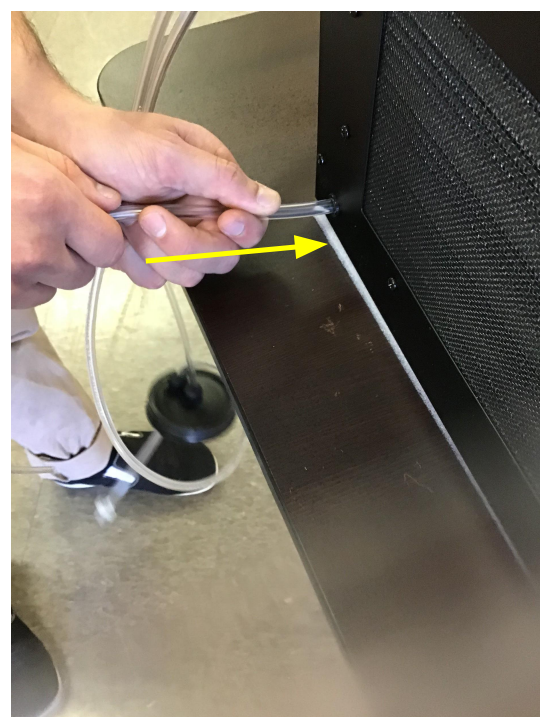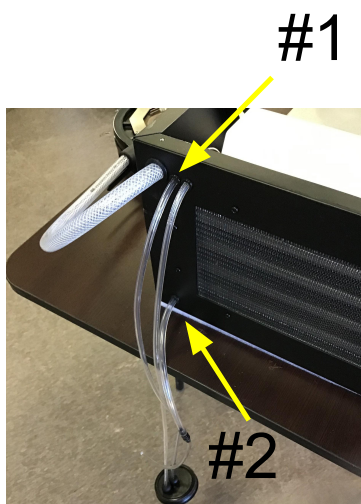

6

## STEP #6



LIFT OLD PUMP PACK UP AS YELLOW ARROWS SHOW  
PULL THE 2 TUBES CAREFULLY  
AS GREEN ARROWS SHOW

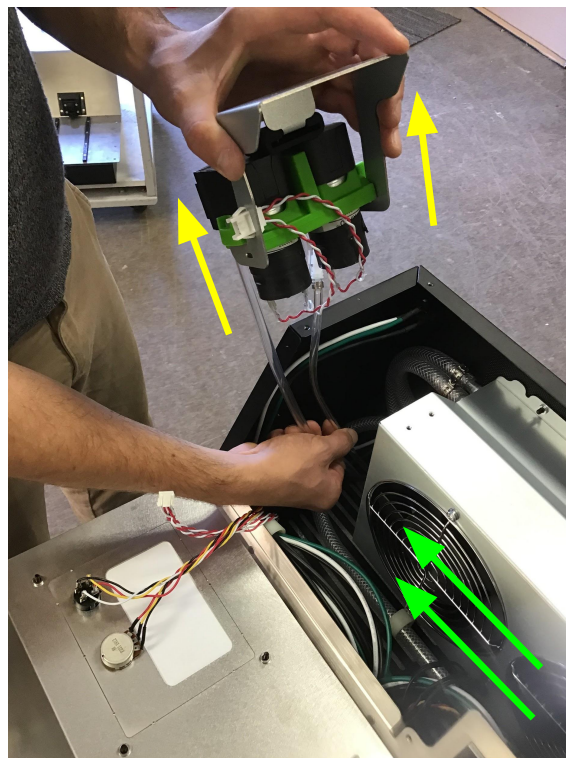

7

## STEP #7



REMOVE COLORED TAPE FROM NEW PUMP PACK AND INSTALL ON  
TUBING OF MATCHING TUBES OF ETOH AS A REFERENCE  
“GREEN ON SMALL TUBE” , “RED ON LARGER TUBE”

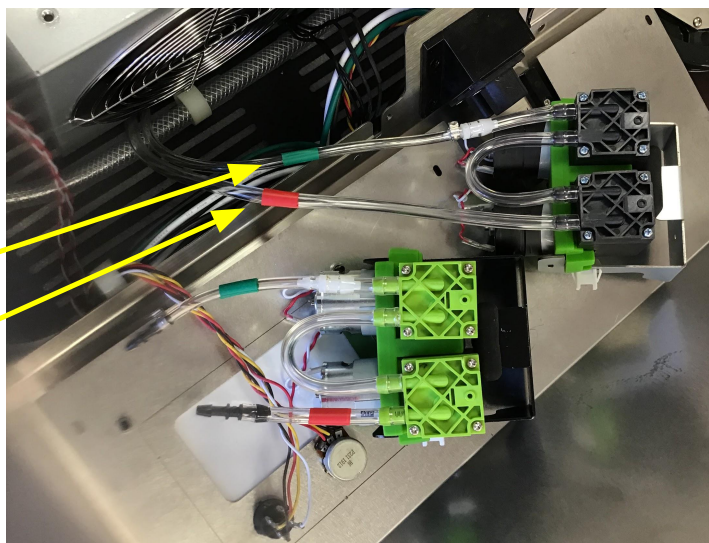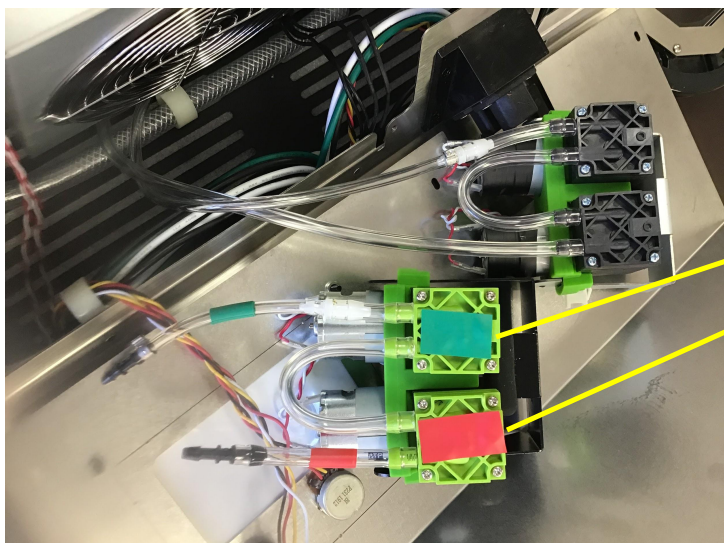

8

## STEP #8

CUT TUBES ON OLD PUMP PACK


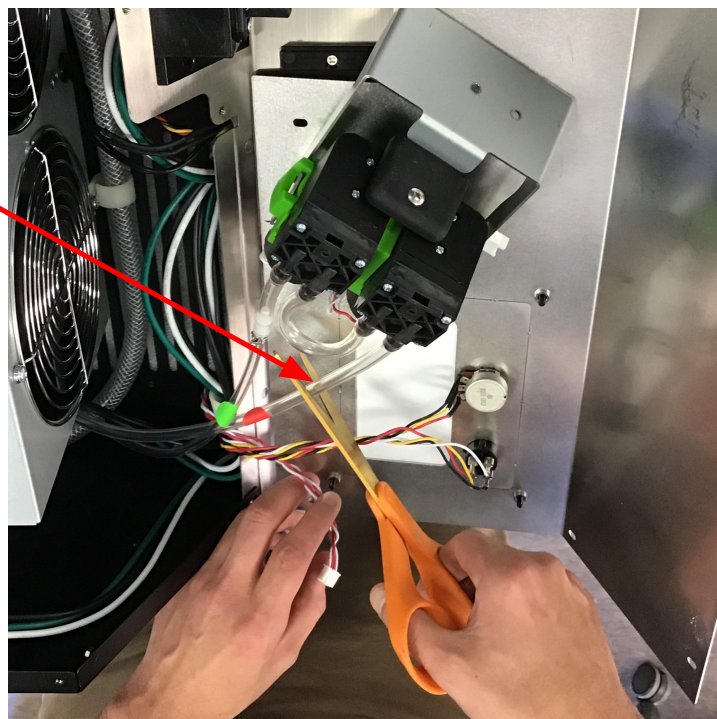
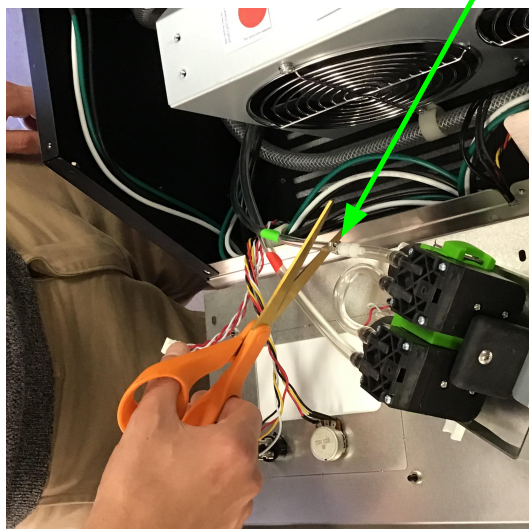


9

## STEP #9

CONNECTING THE NEW PUMP PACK GREEN "SMALLER TUBE"

PUSH IN FIRMLY COMPLETELY  
TO THE STOP

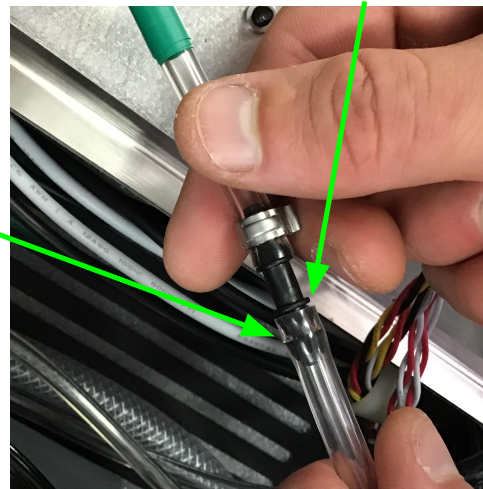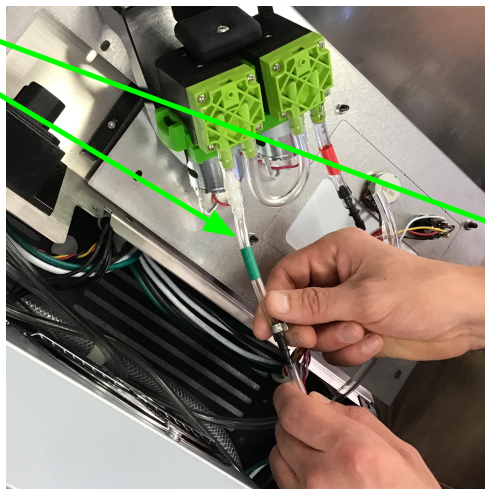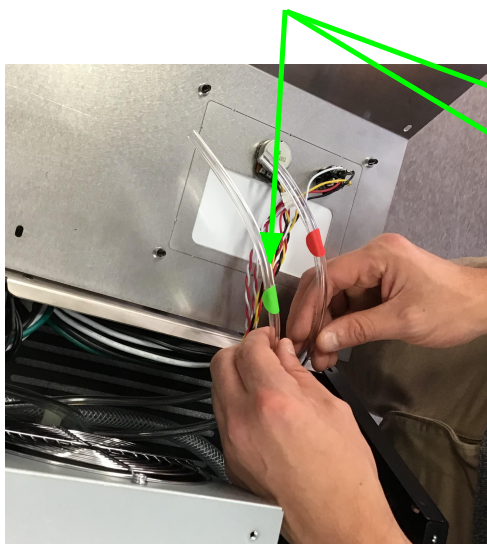


10

## STEP #10

CONNECTING THE NEW PUMP PACK RED "LARGER TUBE"

PUSH IN FIRMLY COMPLETELY  
TO THE STOP

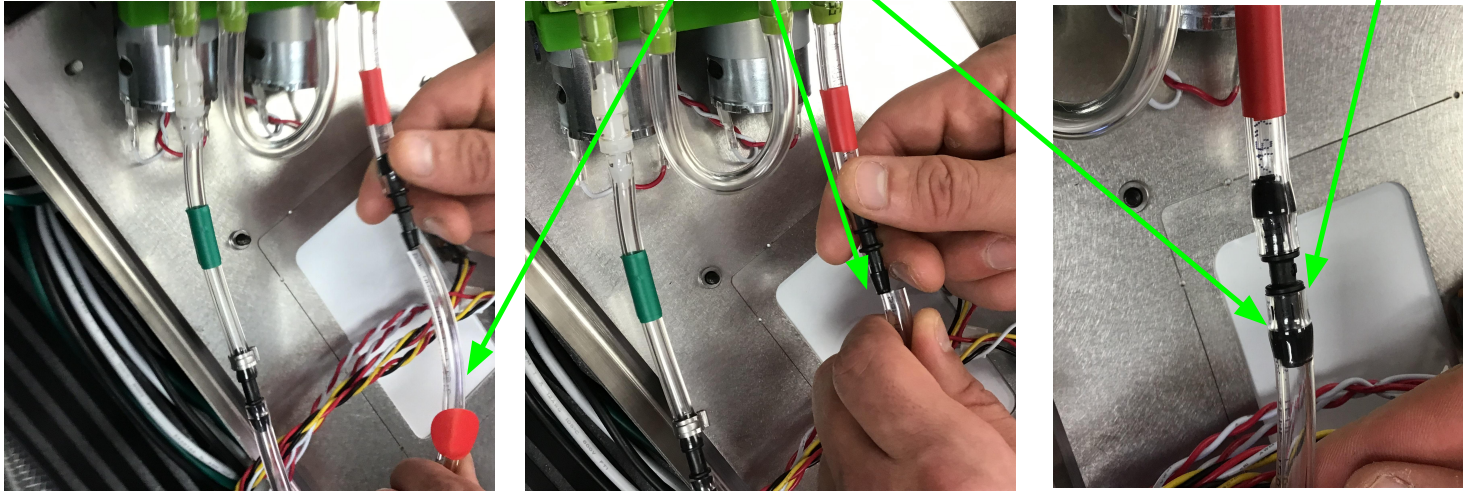


11

## STEP #11

REPOSITIONING THE TUBES


PULL ON TUBES IN DIRECTIONS OF GREEN ARROWS, WHILE PUSHING TUBING IN DIRECTIONS OF RED ARROWS

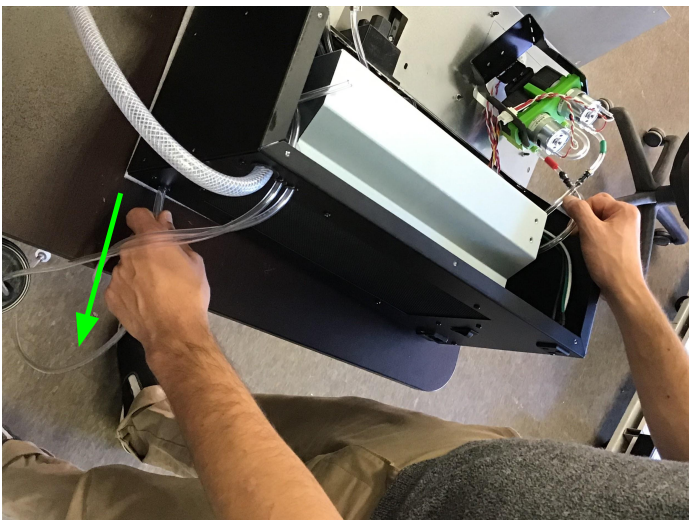


12

## STEP #12

INSTALL 2 M4 SCREWS

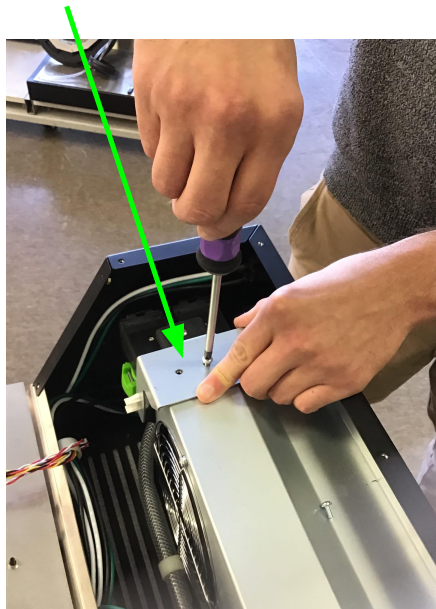

PLUG IN PUMP CABLE UNTIL IT LATCHES

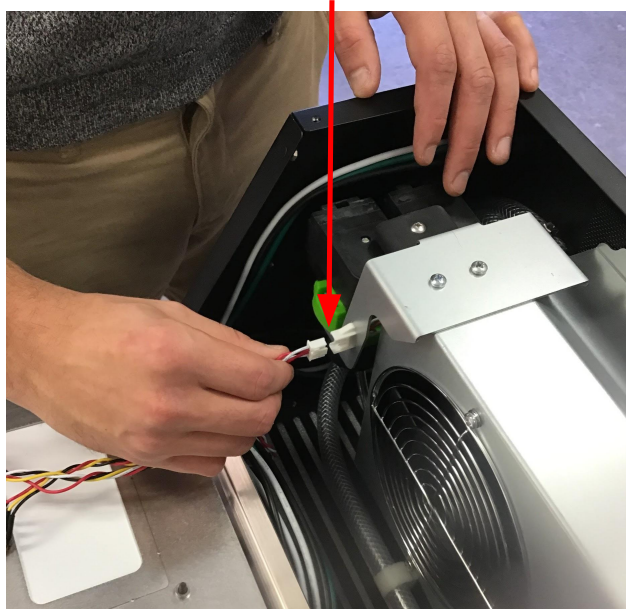


13

## STEP #13

INSTALL ALL 9 SCREWS

FINISHED

TEST WITH 1 PINT [100ml] OF  
ETHANOL FOR PROPER FUNCTION

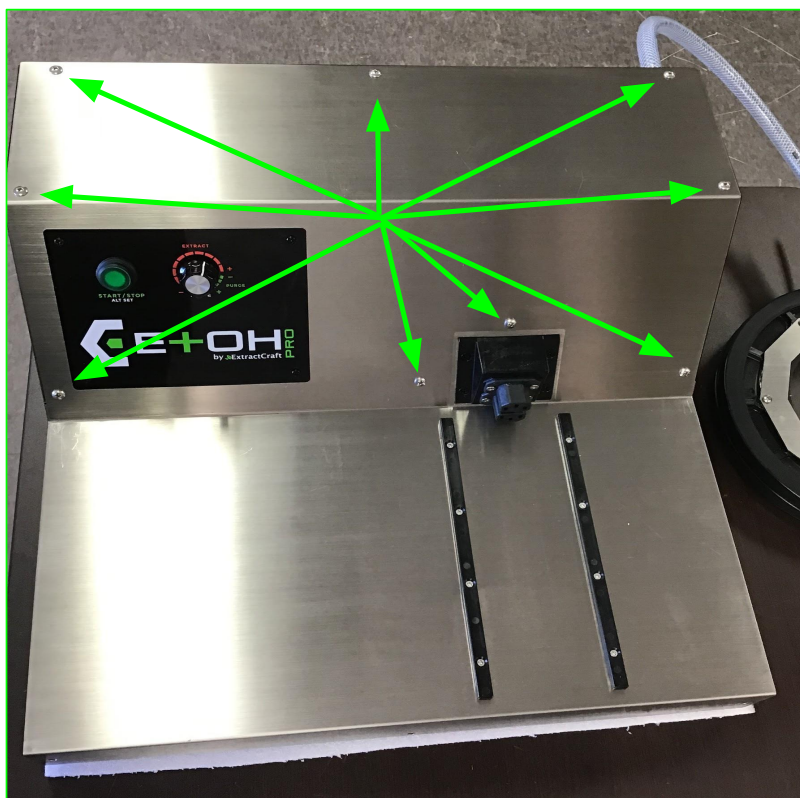

14